

**OPERATING INSTRUCTIONS to be used with PUMP STATION DRAWING DIMENSIONS**

**TO FILL SYSTEM**

Connect water supply to B1

**TO PURGE GROUND LOOP**

Open V1, V2 and V4

Close V3, V5 and V6

Water supply connected to B1

Run one or both pumps

**TO PURGE HEAT PUMPS**

Open V3, V5 and V6

Close V1, V2 and V4

Water supply connected to B1

Run one or both pumps

**TO ADD ANTIFREEZE**

Open V1 and V2

Close V3, V4, V5 and V6

Pump antifreeze in B1 and water out B2

**TO PLACE SYSTEM IN OPERATION MODE**

Open V1, V2, V5 and V6

Close V3 and V4

Pressurize system to 40 – 60 psi